




Edcor XPWR136-120

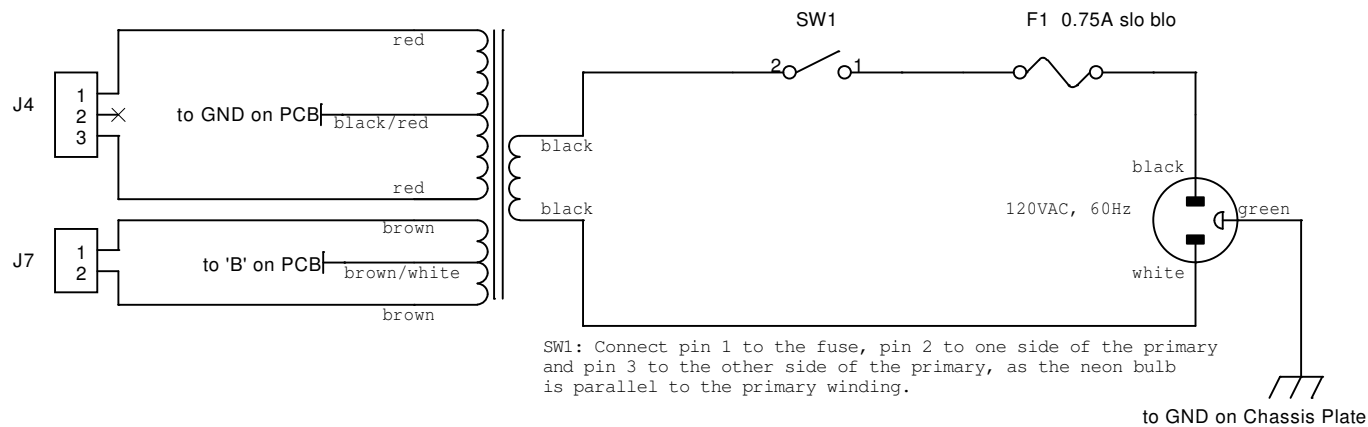


Edcor GXSE10-8-5K (Left)

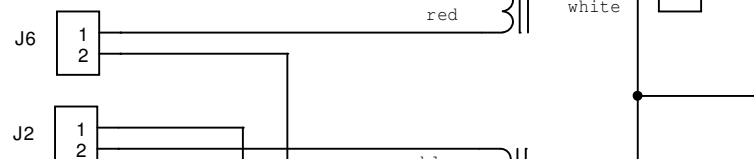

Edcor GXSE10-8-5K (Right)

SPEAKER OFF (DPDT)

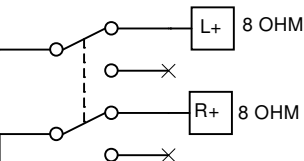

J1-1 Right Input +
J1-2 Right Input -, Left Input -
J1-3 Left Input +

J2-1 Right Output Transformer Screen (blue/white)
J2-2 Right Output Transformer Plate (blue)

J3-1 Left Output Transformer Screen (blue/white)
J3-2 Left Output Transformer Plate (blue)

J4-1 Red Secondary
J4-2 No Connect
J4-3 Red Secondary
Important: Solder secondary center tap to GND eyelet by C11.



J5-1 To Choke
J5-2 From Choke

J6-1 Left Output Transformer B+ (red)
J6-2 Right Output Transformer B+ (red)

J7-1 Filament Tap (brown)
J7-2 Filament Tap (brown)
Important: Solder center tap (brown/white) to 'B' near R17.

J8-1 to L+
J8-2 to R- & L-
J8-3 to R+

J9-1 to Headphone Tip (Left)
J9-2 to Headphone Sleeve (corner) (Ground)
J9-3 to Headphone Ring (Right)

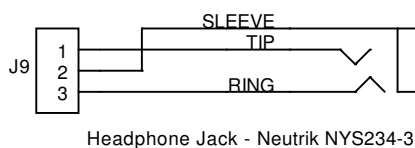

Alps 100K RK27 (or similar)

